




PHONE: (705) 386-0757
 FAX: (705) 386-0915
 TOLL FREE: 1-800-421-1406

BOX 509, SOUTH RIVER, ONTARIO P0A 1X0



BC 101


PARTS LIST

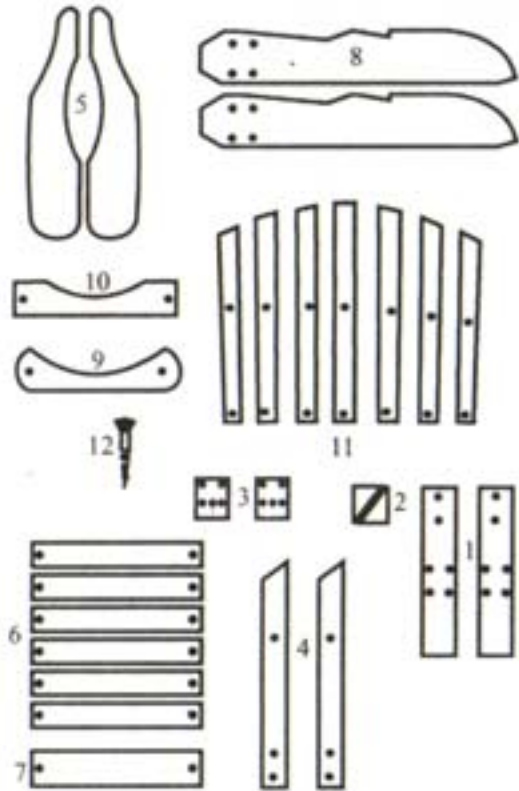

| # | Description | | Qty. |
|----|---------------------|-------------------------------|------|
| 1 | Legs | Pieds | 2 |
| 2 | Triangles | | 2 |
| 3 | Arm Support | Soutiens du bras | 2 |
| 4 | Struts | Supports | 2 |
| 5 | Arms | Bras | 2 |
| 6 | Seat Slats | Lames du siege | 6 |
| 7 | Front Slat | Lame du devant | 1 |
| 8 | Sides | Cotes | 2 |
| 9 | Top Back Support | Support superieurs du dossier | 1 |
| 10 | Bottom Back Support | Support inferieurs du dossier | 1 |
| 11 | Back Slats | Lames du dossier | 7 |
| 12 | Plated Screws | vis | 60 |


REMEMBER TO USE WOOD GLUE ON ALL JOINTS

Directions Mode d'emploi

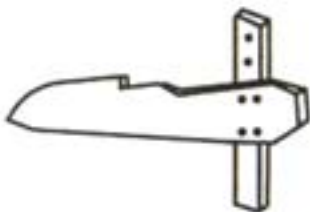

- 1) Attach Legs (#1) to Sides (#8) using 4 plated screws. (Line up pencil marks) Sides are marked left and right.

Joindre les pieds (#1) aux cotes (#8) en utilisant quatre vis. Verifier que les traits au crayon sont alignes.

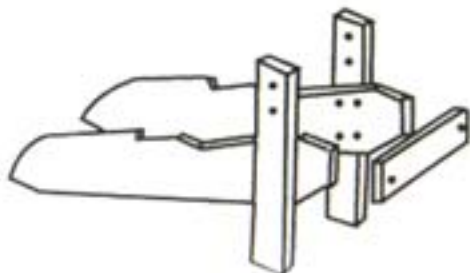

2. Attach Wide Front Slat (#7) to the edge of the Sides using 2 screws.

Joindre la lame de devant (#7) aux bords inferieurs des cotes en utilisant deux vis.