



9. Attach the bottom of **each** strut with 2 screws.

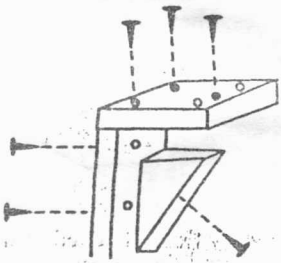

10. Attach the arm supports (#3) to top of the legs (#1) with two screws. Push the triangles (#2) into the right angle corner and attach with 2 screws. **Attach the triangle to the underside of the arms support with 1 screw.**

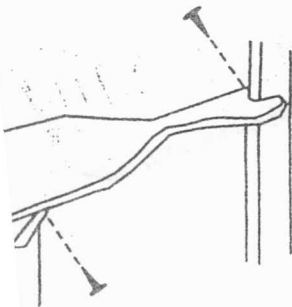

11. Attach the arm to the rear strut with one screw and to the arm support with 2 screws.

**YOU'RE DONE, TRY IT OUT!**